


www.amptech.co.in

User Manual AMP tech Air Inflator

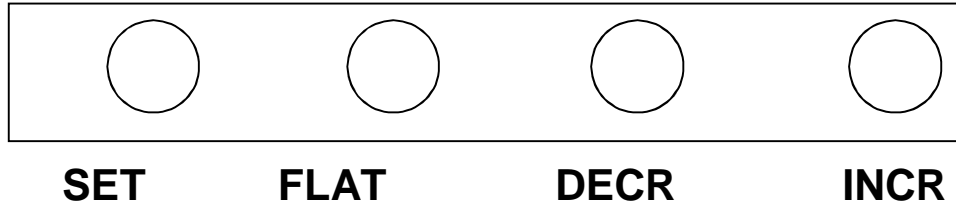

1. For increment of the set value press INCR switch.
2. For decrement of the set value press DECR switch.
3. For change the unit of the inflator
Press 1 time kilopascal.
Press 2 times bar.
Press 3 times Psi.
* Default mode Psi.
4. For find counting Top up or Flat tyre Count Press SET switch for 5 seconds display will show C-1 (top up count) Again Press Set switch then display Shows C2 (Flat / Refill count)
 - To erase the Top up or Flat count press decrement switch.
5. Press set button to toggle between C1 & C2.
6. Exit from Count Mode Press SET Switch 5 sec continuously.
7. To fill up the FLAT TYRE press Flat switch.